


## Dixo mixer containers

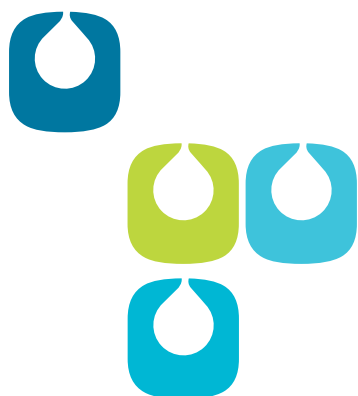

Dixo 100



Dixo 40

### Why?

DIXO mixer containers constantly or sequentially homogenize the dosing solution especially for «powder» products and prevent deposits. The solution stays in suspension and does not settle.

### Equipment

DIXO mixer containers are composed of:

- a food-grade polythene container
- a 316 L stainless steel motorized agitator (PVC option on request)
- a driving reducer with slow rotation
- an adjustable time delay with thermal protection
- an emptying drain on models from 100 litres capacity.

### Technical characteristics

Model	DIXO container
<b>Capacity</b>	40, 100 or 250 litres
<b>Energy</b>	220 volts
<b>Guarantee</b>	3 years
<b>Use</b>	<ul style="list-style-type: none"> <li>&gt; Plug in DIXO container to a 220 V socket</li> <li>&gt; Prepare the solution according to the product instructions</li> <li>&gt; Program the time delay relay according to the product texture (the thicker is the product, the longer will be the mixing)</li> <li>&gt; After each use, rinse thoroughly the container and elements which have been in contact with the solution with water.</li> </ul> <p><b>If it does not work</b>, check the electric system.</p>

